



Please operate the equipment inside the AV wagon.

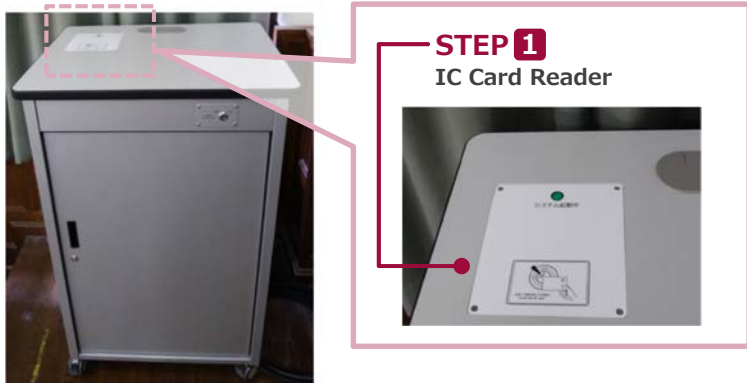

AV Wagon

STEP 1
IC Card Reader

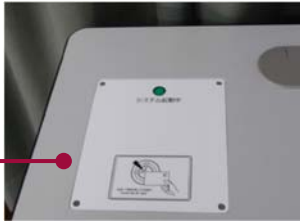

Emergency Key

If the system can not be booted from the IC card, Please use this to start.



Inside the Wagon

Blu-ray/DVD Player

STEP 2 4
System Switcher

STEP 3
AUX Panel

STEP 3
Storage Space

1 System Start-Up

Touch your IC card to the reader.

IC Card Reader




System ON / Door's Key is Unlock

2 AV Presentation

Open the door of the wagon and operate the control panel.


- ① Video Source Select ② MIC Volume ③ AV Volume ④ System Shut Down
※Long Press

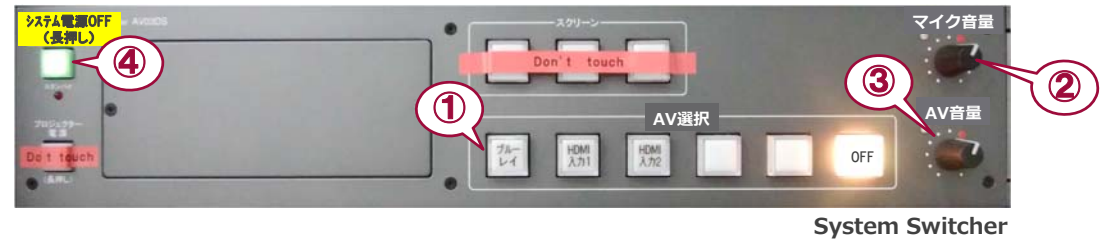

System Switcher

3 Connecting Your BYOD Devices

- Connect your BYOD device to the HDMI INPUT (AUX panel). The Cable is stored in the drawer.

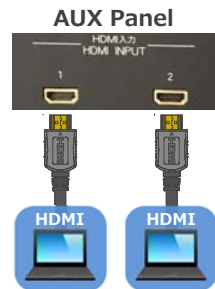

If you use a laptop PC, charge the output setting.

Projector Display Menu



- Duplicate : Duplicate Desktop on Display.
- Extend : Extend Desktop to Display.
- Projector Only : Display Only.

How To Open Projector Display Menu

《Windows 7》
『Windows』 + 『P』



- Connect to wired microphone to the MIC INPUT (AUX panel).



4 System OFF

Press **Shut Down button (④)** and **Close the Wagon's Door**.

※If you use Emergency Key, Please do not press Shut Down Button.
Turn off Emergency Key, and Close the Wagon's Door.