 
 
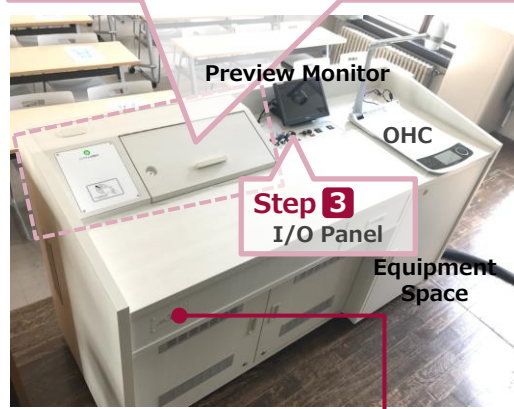 


Please operate the equipment in the AV Control Desk, following the right.

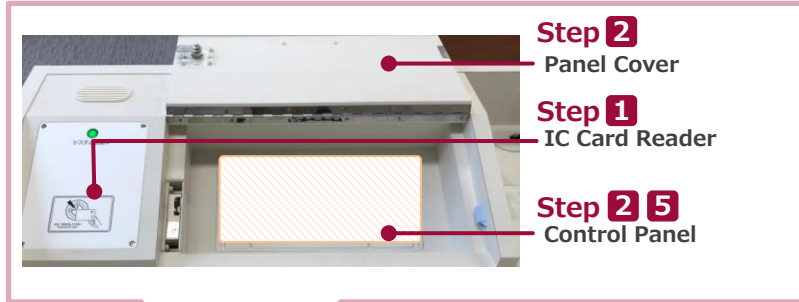

Emergency Reboot Key — **AV Control Desk**
 If the system cannot be started up by IC Card, Use the key.

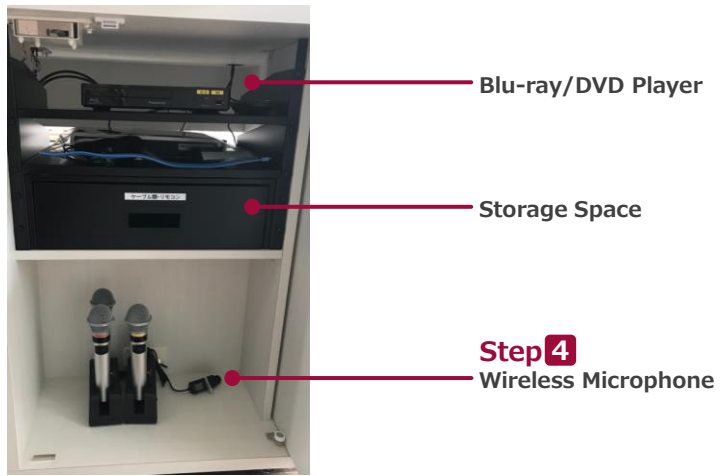

Equipment Space

1 Startup System

Hold IC Card over IC Card Reader.



※If you don't have IC Card, use the Emergency Reboot Key.



 
System ON / The door's key and Panel Cover OPEN

It's possible to use microphones when the system has been started. ⇒Procedure is the back.

2 Startup the other equipment


Open the Panel Cover, operate the Control Panel.

- ① Projector Power ON/OFF
- ② Video output source select: Screen, display, Preview Monitor and more
- ③ The audio output source to speakers select
- ④ Volume control
- ⑤ Screen operation
- ⑥ System OFF

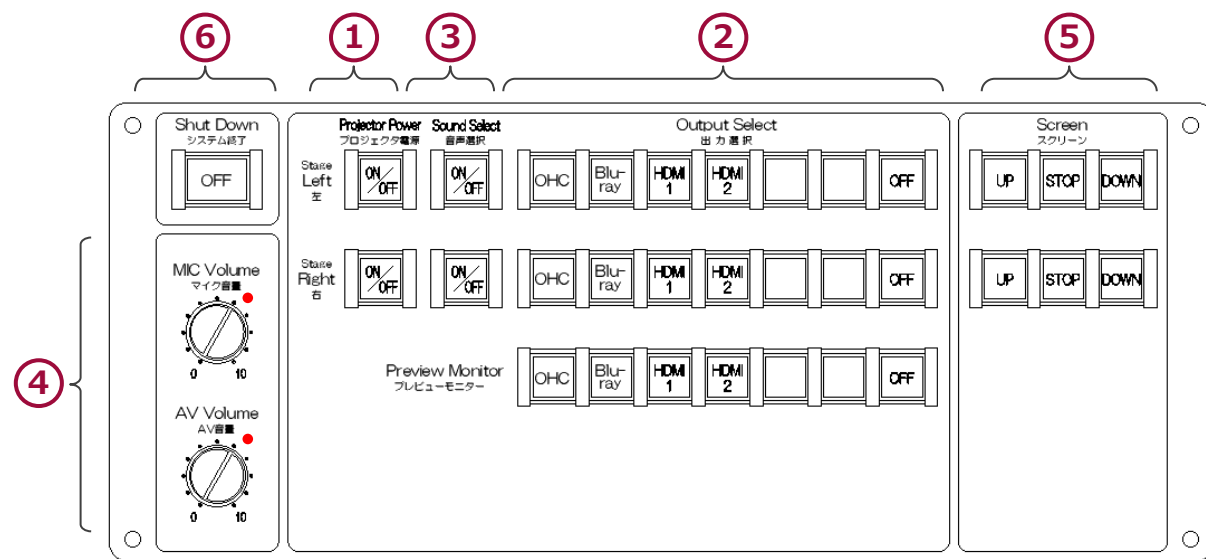

3 Connect BYOD

 Insert the cable of the I/O Panel to your HDMI device and your PC.

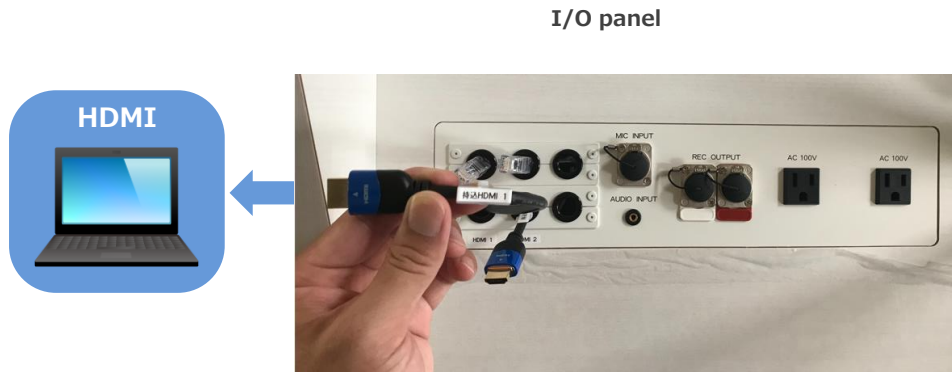

If you use your PC, change the output setting to "External."

External output setting select



- Duplicate : PC and Screen are same.
- Extend : PC and Screen are used like a dual display.
- Projector Only : Screen only

How to open second screen menu

《Windows 10》
『Windows key』 + 『P』




《Except for Windows 10》
List: Computer makers and corresponding keystroke.

[Fn] + [F2]	MSI
[Fn] + [F3]	NEC, Panasonic, SOTEC, MITSUBISHI, Everex
[Fn] + [F4]	HP, Gateway
[Fn] + [F5]	ACER, TOSHIBA, SHARP, SOTEC
[Fn] + [F7]	SONY, IBM, Lenovo, HITACHI
[Fn] + [F8]	DELL, ASUS, EPSON, HITACHI
[Fn] + [F10]	FUJITSU

※Please check the detail by user manual you used.

4 Use Wireless and Wired microphone

 Open the door of AV Control Desk, take microphones out and power on.
Connect **Wired Microphone(bringing)** to the **I/O Panel**.

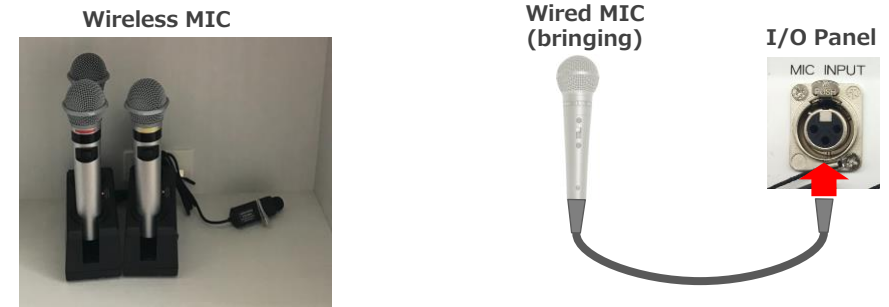

※ **Make sure to return to the Microphone Charger** after using.

5 Control Volume

Volume is set at best level in advance.
If you need to control it, please operate **Volume Control** on the **Control Panel**.



MIC Volume
Control volume of Wireless MIC and Wired MIC(bringing).



AV Volume
Control volume of Video: Blu-ray, PC and more.

Restore original level() after using.

6 System OFF

Press **Shut Down Key** in **Control Panel**, **close Panel Cover** and **AV Control Desk's door**.

