


Please operate the equipment inside the AV wagon.



AV Wagon

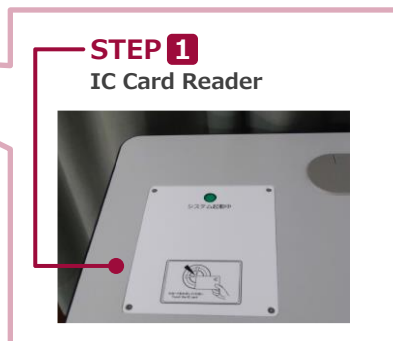

STEP 1
IC Card Reader



Emergency Key

If the system can not be booted from the IC card, Please use this to start.



Inside the Wagon

Blu-ray/DVD Player

STEP 2 4

System Switcher

STEP 3

AUX Panel

STEP 3

Storage Space

1 System Start-Up

Touch your IC card to the reader.

IC Card Reader



System ON / Door's Key is Unlock

You can use the Wireless Microphone.

Take out the microphone charger and turn on the microphone.

2 AV Presentation

Open the door of the wagon and operate the control panel.



- ① Projector Power ON/OFF ※Long Press ② Lower the screen
③ Video Source Select ④ MIC Volume ⑤ AV Volme ⑥ System Shut Down
※Long Press



System Switcher

3 Connecting Your BYOD Devices

- Connect your BYOD device (with the document cameras) to the HDMI INPUT (AUX panel).
If you use a laptop PC, charge the output setting.
The Cable is stored in the drawer.

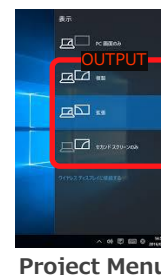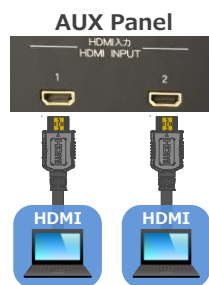

How To Open "Project" menu


《Windows 10》

『Windows Key』 + 『P』



- Duplicate : Duplicate Desktop on Projector.
- Extend : Extend Desktop to Projector.
- Second screen Only : Projector Only.

- Connect to wired microphone to the MIC INPUT. (Auxiliary)
- Connect to music player to the AUDIO INPUT.

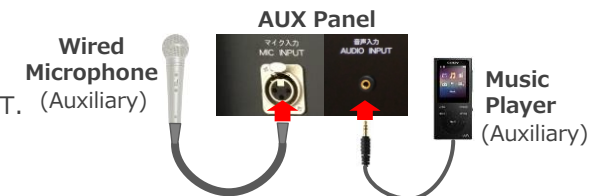

4 System OFF

Press **Shut Down button (⑤)** and **Close the Wagon's Door**.

※If you use Emergency Key, Please do not press Shut Down Button.

Turn off Emergency Key, and Close the Wagon's Door.