



Please operate the equipment inside the AV Rack.

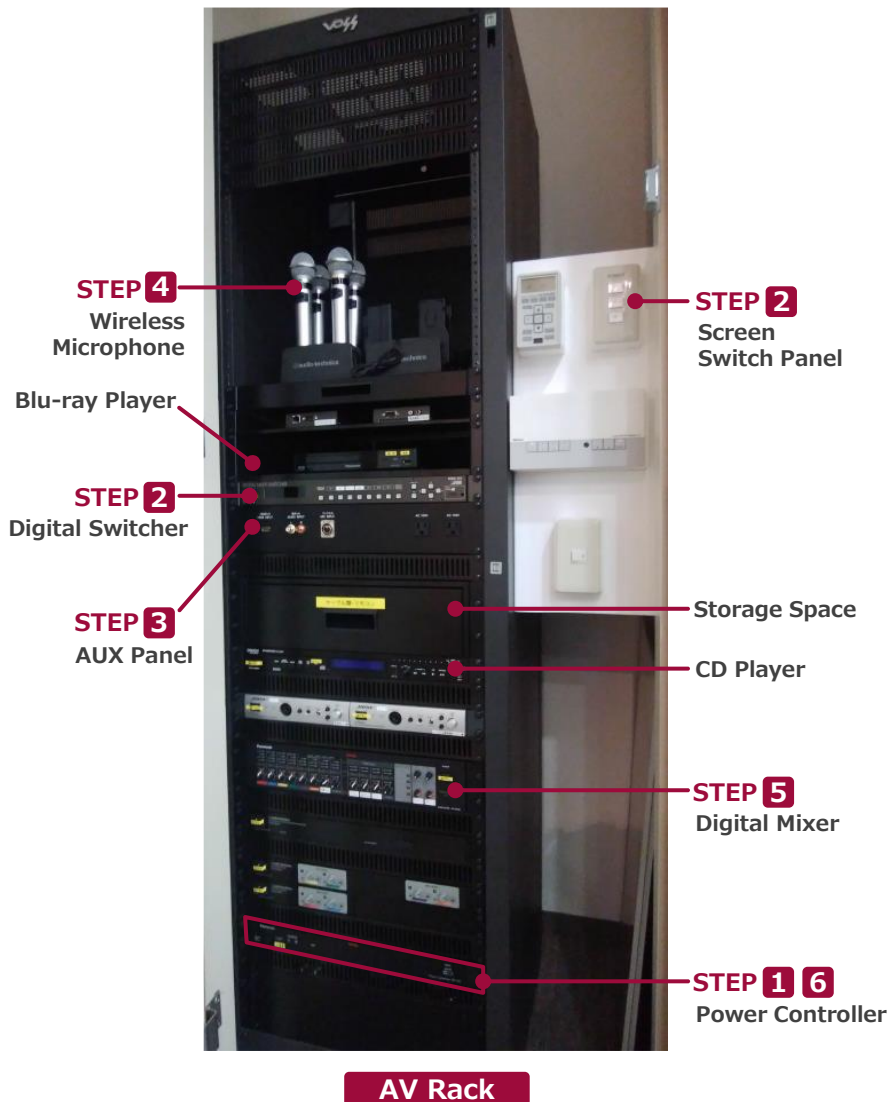

1 System Start-Up


Please push the switch of the Power controller.

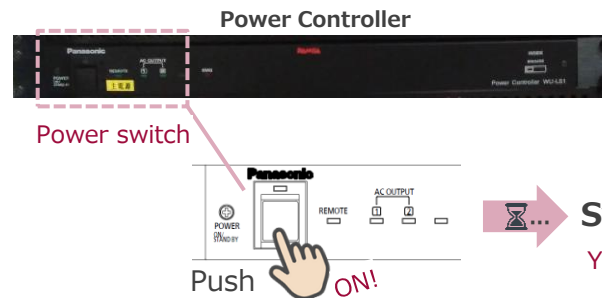

2 AV Presentation


Please operate each equipment by the following procedure.

- ① Projector Power ON ⇒ Remote controller of a projector
- ② Set a screen ⇒ Screen Switch Panel
- ③ Video Source Select ⇒ Digital Switcher

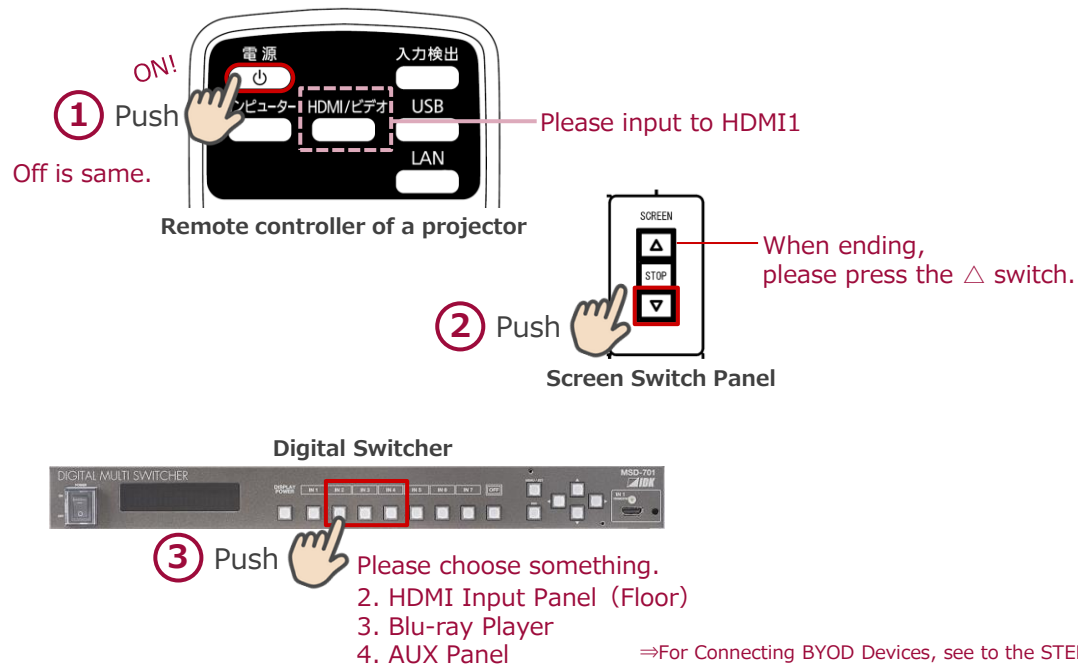

3 Connecting Your BYOD Devices

Connect your BYOD device to the AUX panel.

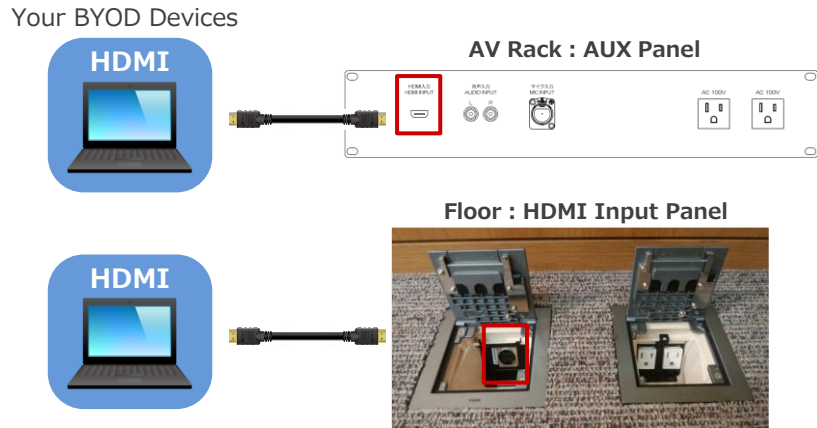

If you use a laptop PC, charge the output setting.

Projector Display Menu



- **Duplicate** : Duplicate Desktop on Projector.
- **Extend** : Extend Desktop to Projector.
- **Projector Only**

How To Open Projector Display Menu

《Windows 7》

Press 『Windows』 + 『P』



《Not Windows 7》

Fn + F2	MSI
Fn + F3	NEC, Panasonic, SOTEC, MITSUBISHI, Everex
Fn + F4	HP, Gateway
Fn + F5	ACER, TOSHIBA, SHARP, SOTEC
Fn + F7	SONY, IBM, Lenovo, HITACHI
Fn + F8	DELL, ASUS, EPSON, HITACHI
Fn + F10	FUJITSU

4 Use Wireless Microphone and Auxiliary Wired Microphone


Take out the microphone charger and turn on the microphone. Connect to wired microphone to the AUX panel.

Wireless Microphone



Charging Sign

Auxiliary Wired Microphone

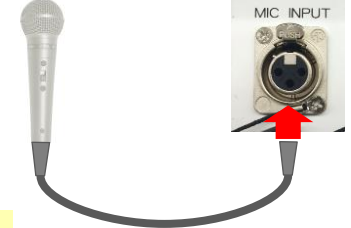

AUX Panel



Make sure to return to the microphone charger after using the microphone.

5 Audio Volume Control

The volume is adjusted to the optimum level beforehand.

When adjustment is necessary, please operate the volume knob on the control panel.

Digital Mixer



Inside the room

ceiling speaker

Outside the room ※

AV Volume

Video audio (Blu-ray, Laptop PC etc.)

MIC Volume

Wireless microphone and Wired microphone

Please return to the original level (●) after using the system.

※ Please use a outside speaker when necessary.

6 System OFF

Please operate each equipment by the following procedure.

- ① **Projector Power OFF** ⇒ Remote controller of a projector
- ② **put a screen away** ⇒ Screen Switch Panel
- ③ **System off** ⇒ Power Controller

