


Please operate the equipment inside the AV control desk.

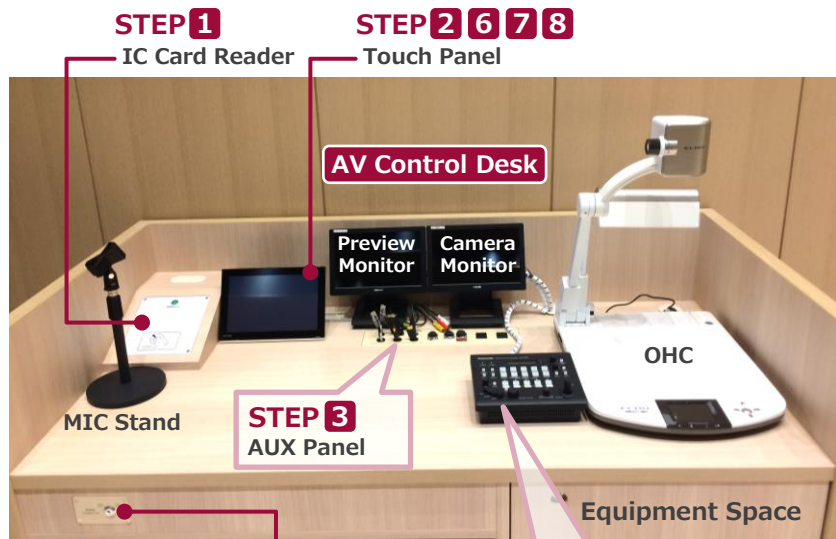


**Emergency Key**  
If the system can not be booted from the IC card, Please use this to start.

**STEP 4**  
Camera Controller



## 1 System Start-Up

Touch your IC card to the reader.

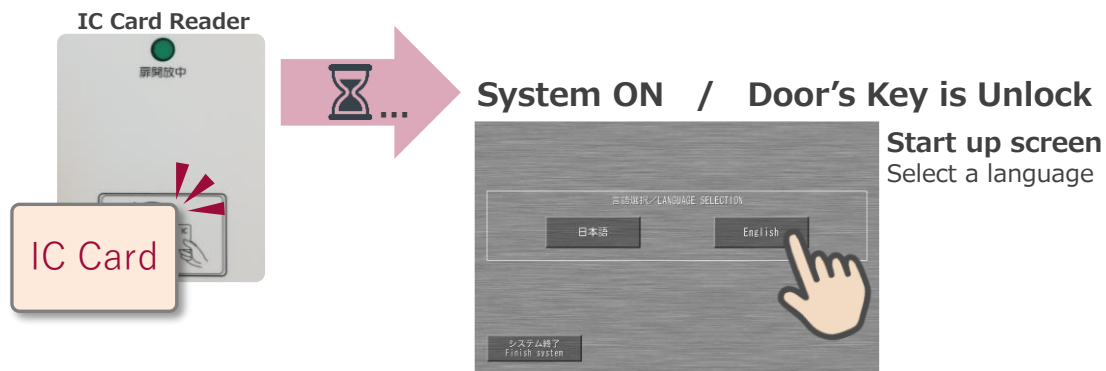

You can use the Microphone system.


⇒For details, see to the STEP 5.

## 2 AV Presentation

Please operate the touch panel.

When using the projection screen, operate the ceiling batten control panel first.

- ① **Video Source Select** ※Turn on the projector power supply from the environmental setting button.
- ② **Blu-ray/DVD Player Operation** ⇒For details, see to the STEP 7.
- ③ **Video Output Confirmation** ※You can see what images are displayed on the monitor outside the classroom.
- ④ **Audio Volume**
- ⑤ **Recording operation at simultaneous interpretation**
- ⑥ **Environmental Setting** ※Detailed settings
- ⑦ **System Shut Down**

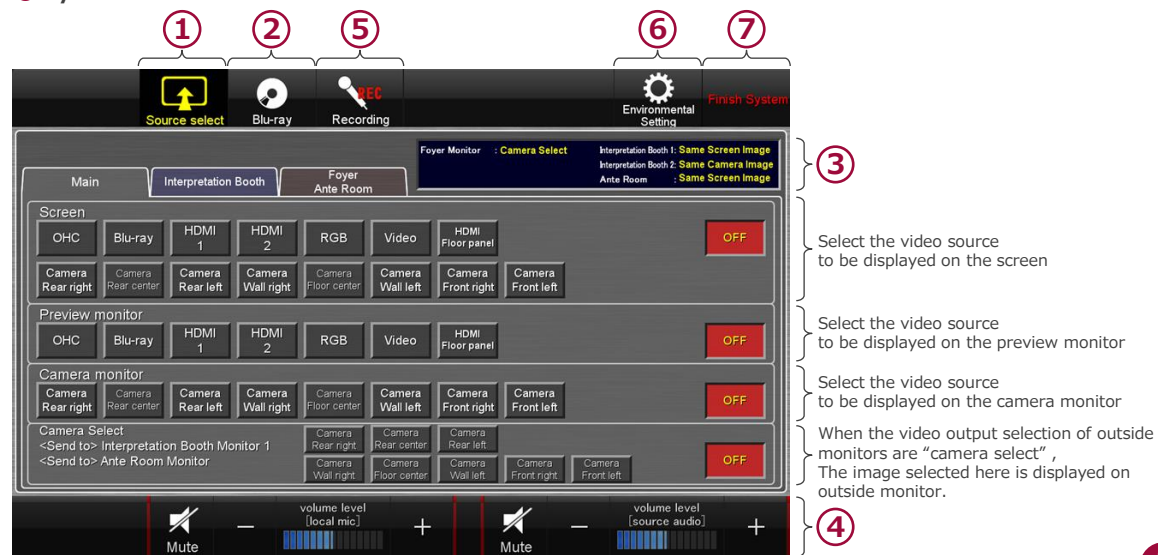

Touch Panel (Source select)

### 3 Connecting Your BYOD Devices

Connect your BYOD device to the AUX panel of the desk or floor.

#### AUX Panel (Desk)




Select button



#### AUX Panel (Floor)

※Stage center

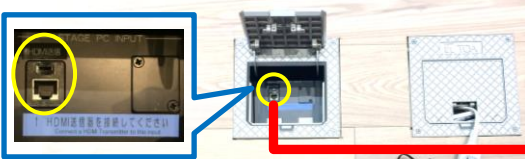

Select button



Please connect the equipment. The cable is stored in a drawer.

HDMI Transmitter →



← LAN Cable for HDMI

← HDMI Cable



If you use a laptop PC, charge the output setting.

#### Projector Display Menu



- Duplicate : Duplicate Desktop on Projector.
- Extend : Extend Desktop to Projector.
- Projector Only

#### How To Open Projector Display Menu

《Windows 7》  
Press 『Windows』 + 『P』



《(Not Windows 7)》

【コンピュータメーカーとキー操作の例】

[Fn] + [F2]	MSI
[Fn] + [F3]	NEC, Panasonic, SOTEC, MITSUBISHI, Everex
[Fn] + [F4]	HP, Gateway
[Fn] + [E5]	ACER, TOSHIBA, SHARP, SOTEC
[Fn] + [F7]	SONY, IBM, Lenovo, HITACHI
[Fn] + [F8]	DELL, ASUS, EPSON, HITACHI
[Fn] + [F10]	FUJITSU

※詳しい操作は、お使いのコンピュータの取扱説明書をご覧ください。


### 4 Camera Operation

There are four cameras in the classroom. Please operate the camera controller while watching the camera monitor.


#### Camera Controller



#### Camera Location

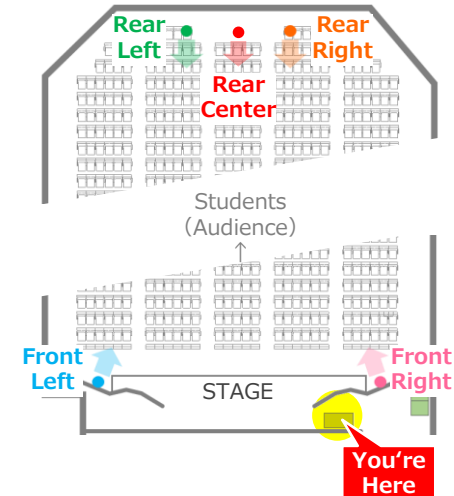

#### Touch Panel (Source select)

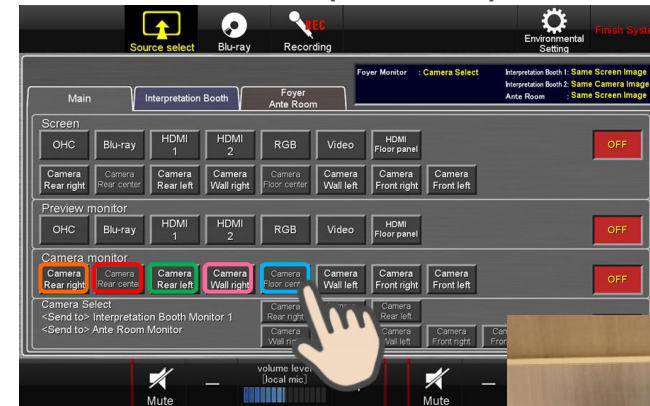

#### How to check with the camera monitor

Select the camera image you want to check from the touch panel.




## 5 Use Wireless Microphone and Wired Microphone

Take out the microphone charger and turn on the microphone. Connect to wired microphone to the AUX panel of the desk or floor.




**Make sure to return to the microphone charger after using the microphone.**

### Floor Panel Location

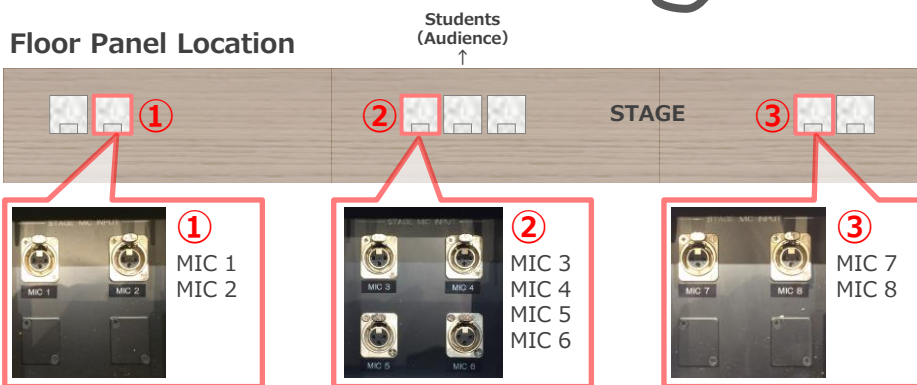

## 6 Audio Volume Control

The volume is adjusted to the optimum level beforehand. When adjustment is necessary, please operate the touch panel.

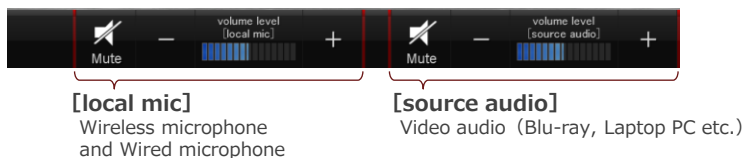


If you want to adjust the volume of each wireless microphone and wired microphone, you can operate from the environmental setting button.



## 7 Environmental Setting


You can change the lighting scene, screen/projector operation, and volume control for each microphone from the environmental setting button.

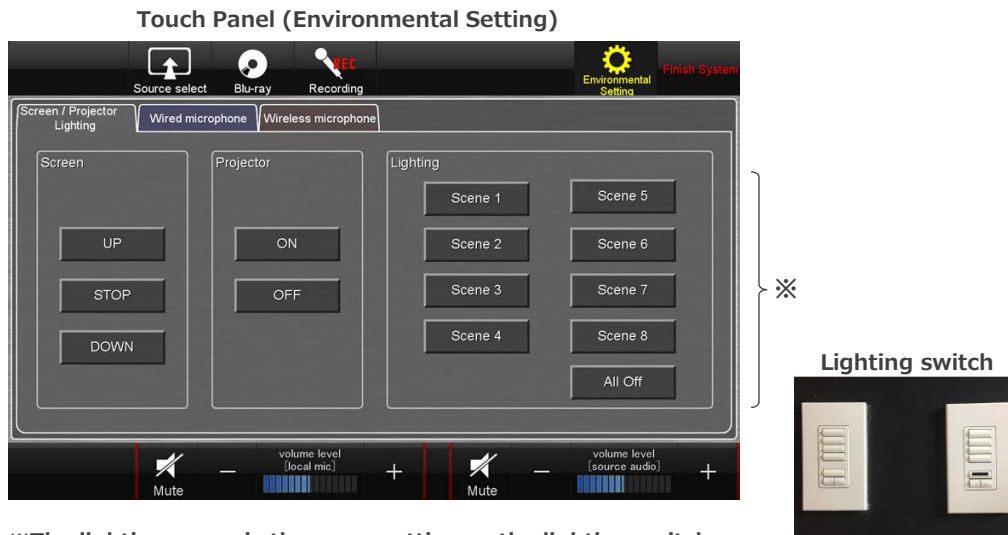

※The lighting scene is the same setting as the lighting switch. Refer to the manual of the lighting equipment for the setting contents of each scene.

## 8 System OFF

Touch **Finish System** button on Touch Panel and **Close the Desk's Door**.

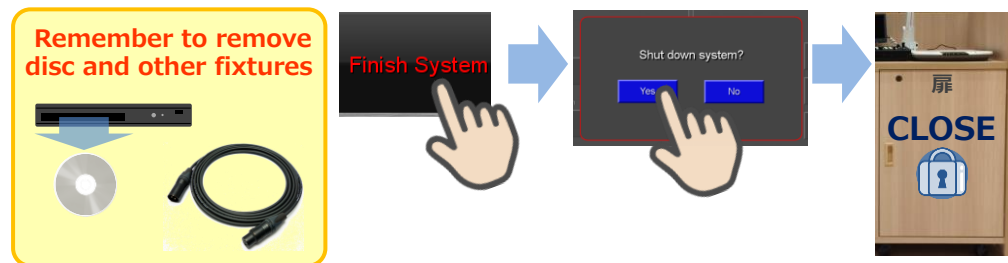

### Caution

**System shutdown and projector screen UP are not interlock.** After the system shut down, please operate the ceiling batten control panel.

※Before the system shutdown, you can operate from the touch panel.