 
 


Please operate the equipment inside the AV control desk.

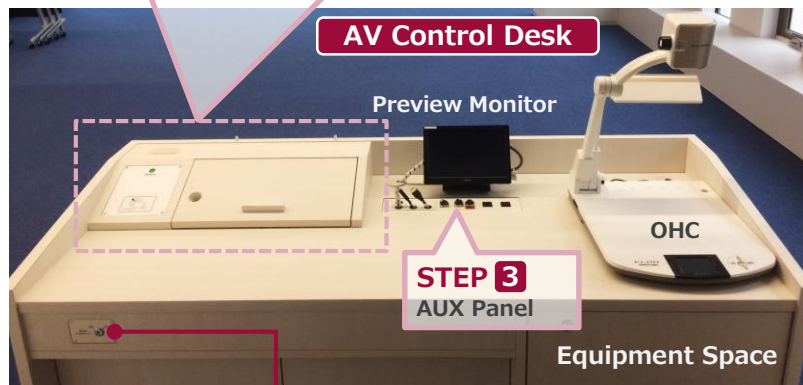

**Emergency Key**

If the system can not be booted from the IC card, Please use this to start.

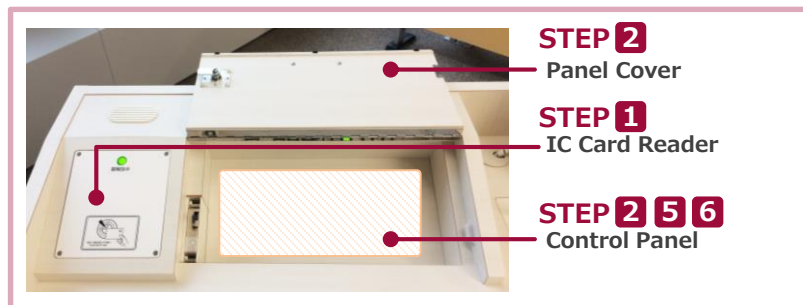

Equipment Space

**1 System Start-Up**

Touch your IC card to the reader.



**System ON / Door's Key is Unlock**

 
You can use the Microphone system.

⇒For details, see to the STEP 4.

**2 AV Presentation**


Open the panel cover of the desk and operate the control panel.

- ① Projector Power ON/OFF ※The screen goes down at the same time as ON.
- ② Video Source Select
- ③ Audio Select
- ④ Audio Volume
- ⑤ Screen Control
- ⑥ System Shut Down

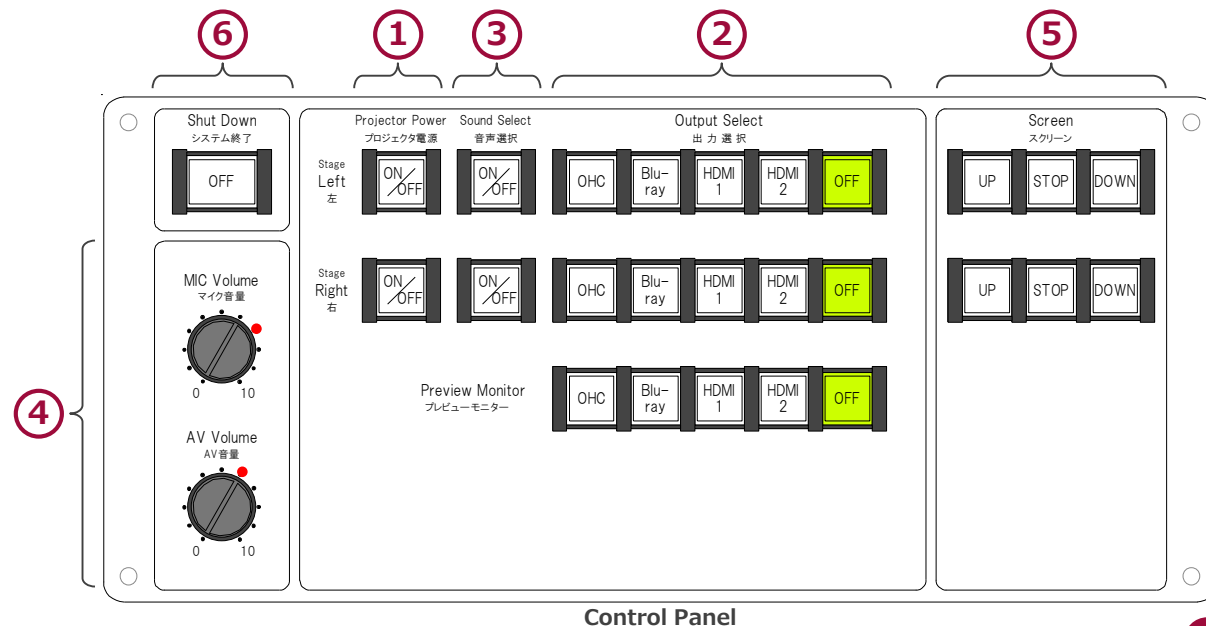

### 3 Connecting Your BYOD Devices

 Connect your BYOD device to the AUX panel.

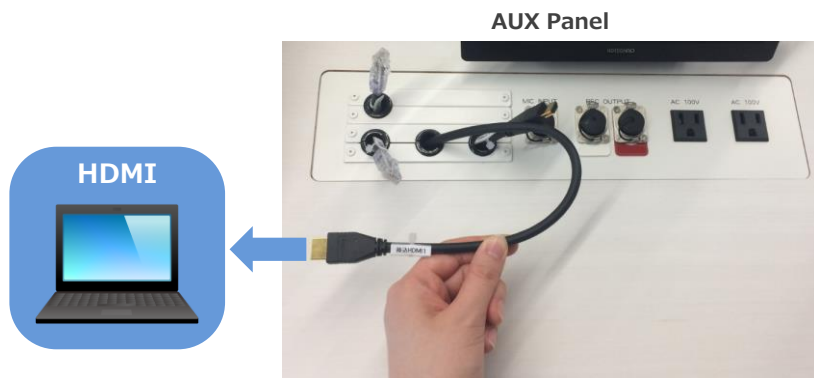

If you use a laptop PC, charge the output setting.

#### Projector Display Menu



- **Duplicate** : Duplicate Desktop on Projector.
- **Extend** : Extend Desktop to Projector.
- **Projector Only**

#### How To Open Projector Display Menu

《Windows 7》

Press 『Windows』 + 『P』



《Not Windows 7》

Fn + F2	MSI
Fn + F3	NEC, Panasonic, SOTEC, MITSUBISHI, Everex
Fn + F4	HP, Gateway
Fn + F5	ACER, TOSHIBA, SHARP, SOTEC
Fn + F7	SONY, IBM, Lenovo, HITACHI
Fn + F8	DELL, ASUS, EPSON, HITACHI
Fn + F10	FUJITSU

### 4 Use Wireless Microphone and Auxiliary Wired Microphone

Take out the microphone charger and turn on the microphone. Connect to wired microphone to the AUX panel.



**Make sure to return to the microphone charger after using the microphone.**

### 5 Audio Volume Control

The volume is adjusted to the optimum level beforehand.

When adjustment is necessary, please operate the volume knob on the control panel.



#### MIC Volume

Wireless microphone and Wired microphone



#### AV Volume

Video audio (Blu-ray, Laptop PC etc.)

Please return to the original level (●) after using the system.

### 6 System OFF

Press **Shut Down button** on Control Panel and **Close the Desk's Door**.

