


Please operate the equipment inside the AV wagon.

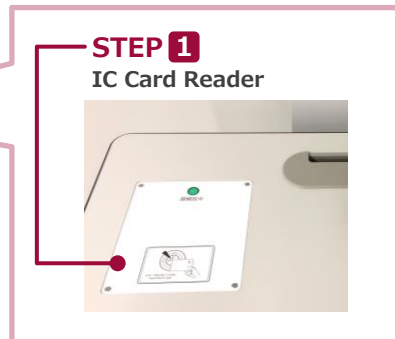

AV Wagon



Wireless Microphone

Emergency Key
If the system can not be booted from the IC card, Please use this to start.

Blu-ray/DVD Player

STEP 2 4
System Switcher

STEP 3
AUX Panel

STEP 3
Storage Space

DO NOT TOUCH



Inside the Wagon

1 System Start-Up

Touch your IC card to the reader.

IC Card Reader




System ON / Door's Key is Unlock

You can use the **Wireless Microphone**.
Take out the microphone charger and turn on the microphone.

2 AV Presentation

Open the door of the wagon and operate the control panel.


- ① Video Source Select
- ② Audio Volume
- ③ System Shut Down ※Long Press

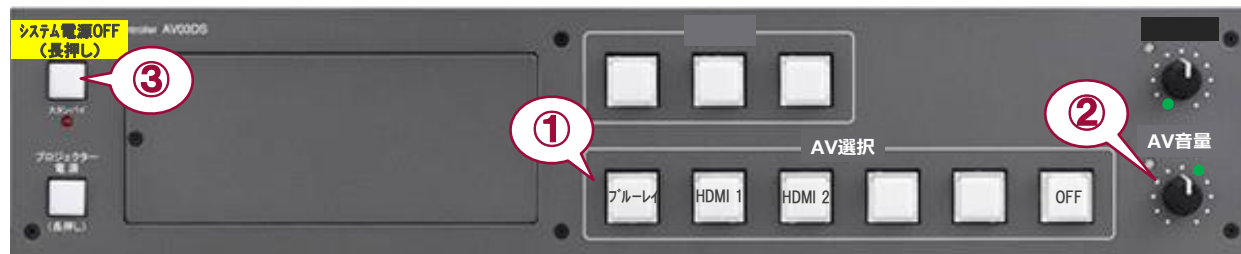

System Switcher

3 Connecting Your BYOD Devices

Connect your BYOD device to the AUX panel.
The Cable is stored in the drawer.

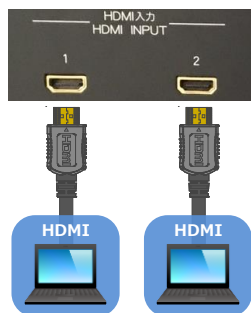

If you use a laptop PC, charge the output setting.

Projector Display Menu



- Duplicate : Duplicate Desktop on Display.
- Extend : Extend Desktop to Display.
- Projector Only : Display Only.

How To Open Projector Display Menu
《Windows 7》
『Windows』 + 『P』



4 System OFF

Press **Shut Down button (④)** and **Close the Wagon's Door**.
※If you use Emergency Key, Please do not press Shut Down Button.
Turn off Emergency Key, and Close the Wagon's Door.