

Please operate the equipment inside the AV wagon.



AV Wagon



**STEP 1**  
IC Card Reader

## 1 System Start-Up

Touch your IC card to the reader.

IC Card Reader



System ON / Door's Key is Unlock

## 2 AV Presentation

Open the door of the wagon and operate the control panel.


- ① Projector Power ON/OFF ※Long Press
- ② Screen Control
- ③ Video Source Select
- ④ Audio Volume
- ⑤ System Shut Down ※Long Press



System Switcher

## 3 Connecting Your BYOD Devices

Connect your BYOD device to the AUX panel.  
The Cable is stored in the drawer.

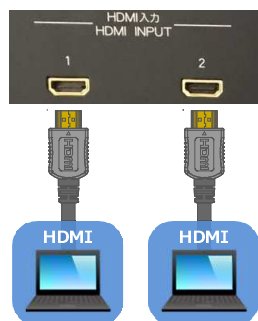

If you use a laptop PC, charge the output setting.

Projector Display Menu



- Duplicate : Duplicate Desktop on Projector.
- Extend : Extend Desktop to Projector.
- Projector Only

How To Open Projector Display Menu

《Windows 7》  
『Windows』 + 『P』



## 4 System OFF

Press **Shut Down button ( ⑤ )** and **Close the Wagon's Door.**

※If you use Emergency Key, Please do not press Shut Down Button.

Turn off Emergency Key, and Close the Wagon's Door.

### Emergency Key

If the system can not be booted from the IC card, Please use this to start.



Blu-ray/DVD Player

**STEP 2 4**

System Switcher

**STEP 3**

AUX Panel

**STEP 3**

Storage Space

Inside the Wagon