


Please operate the equipment inside the AV wagon.

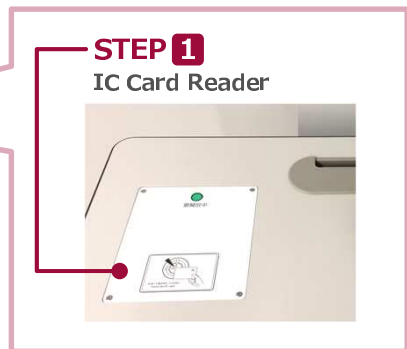

AV Wagon



Wireless Microphone

**Emergency Key**  
If the system can not be booted from the IC card, Please use this to start.

Blu-ray/DVD Player

**STEP 2 4**  
System Switcher

**STEP 3**  
AUX Panel

**STEP 3**  
Storage Space

DO NOT TOUCH



Inside the Wagon

## 1 System Start-Up

Touch your IC card to the reader.

IC Card Reader



**System ON / Door's Key is Unlock**

You can use the Wireless Microphone.

Take out the microphone charger and turn on the microphone.

## 2 AV Presentation

Open the door of the wagon and operate the control panel.


- ① Projector Power ON/OFF ※Long Press
- ③ Video Source Select
- ⑤ System Shut Down ※Long Press
- ② Screen Control
- ④ Audio Volume



System Switcher

## 3 Connecting Your BYOD Devices

Connect your BYOD device to the AUX panel.  
The Cable is stored in the drawer.

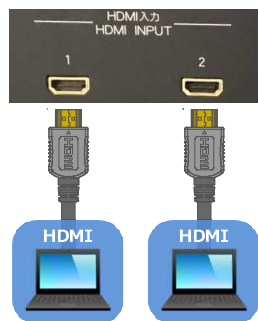

If you use a laptop PC, charge the output setting.

Projector Display Menu



- Duplicate : Duplicate Desktop on Projector.
- Extend : Extend Desktop to Projector.
- Projector Only

How To Open Projector Display Menu

《Windows 7》  
『Windows』 + 『P』



## 4 System OFF

Press **Shut Down button ( 5 )** and **Close the Wagon's Door.**

※If you use Emergency Key, Please do not press Shut Down Button.

Turn off Emergency Key, and Close the Wagon's Door.