


Interpreter Unit Simplified Operation Manual

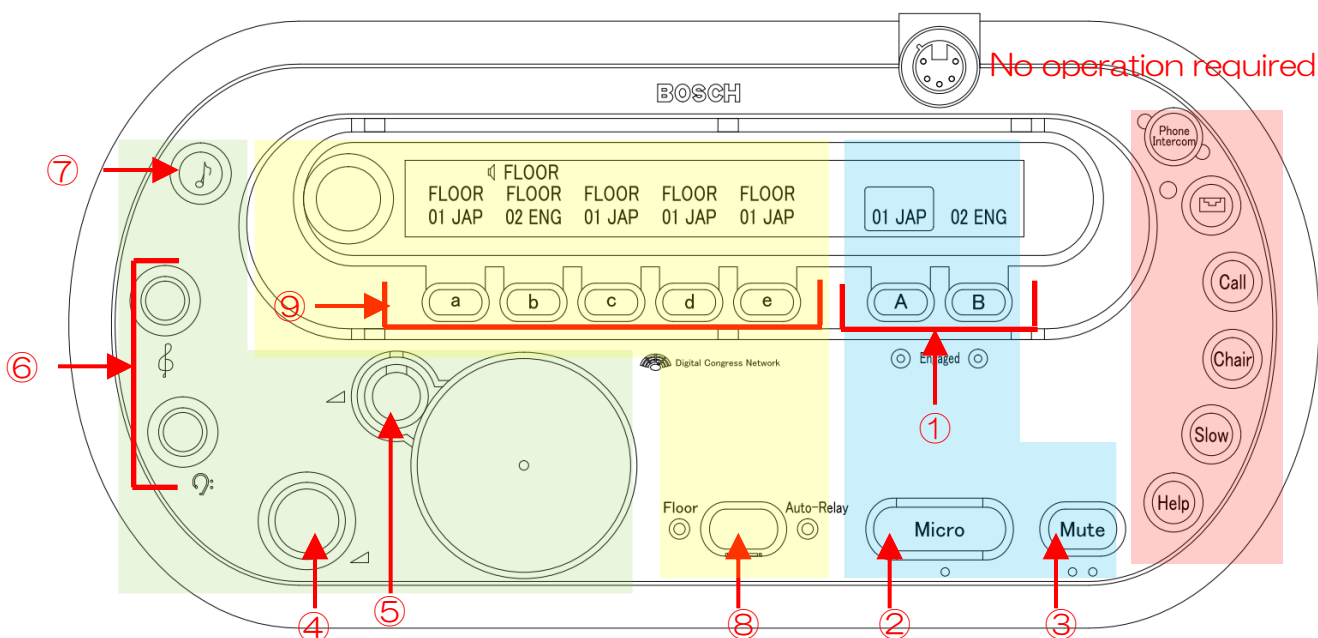

【Microphone Operation】

- ① Use the “Channel Select” “A” “B” to select the language to be interpreted, as displayed on the LCD
- ② Use the “Microphone” to turn the microphone ON and OFF
- ③ Press the “Mute” to temporarily turn the microphone off

【 Adjustment of the listening voice 】

- ④ The headphone volume can be adjusted
- ⑤ The speaker volume can be adjusted. (The speaker is turned off when the microphone is on)
- ⑥ Adjust the sound quality of the audio to be listened to. (Top knob: high audio, Bottom knob: low audio)
- ⑦ Select the audio to be heard on the speakers

【 Selecting the audio for listening 】

- ⑧ Select this option to listen to the floor audio (venue audio) only
- ⑨ To listen to the interpreter audio and floor audio, select the language allocated to the channel selector (Used during relay interpreting)