Please operate the equipment inside the AV wagon.
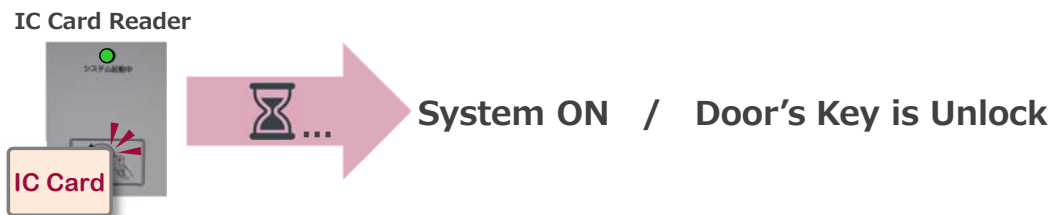
STEP 1
IC Card Reader

AV Wagon

Emergency Key
If the system can not be booted from the IC card, Please use this to start.

Blu-ray/DVD Player

STEP 2 4
System Switcher

STEP 3
AUX Panel

STEP 3
Storage Space

DO NOT TOUCH
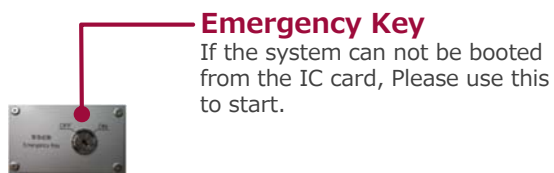
Inside the Wagon

1 System Start-Up

Touch your IC card to the reader.

IC Card Reader

IC Card

⌛ ...   **System ON / Door's Key is Unlock**

2 AV Presentation

Open the door of the wagon and operate the control panel.
① **Projector Power ON/OFF ※Long Press**
② **Video Source Select** ③ **MIC Volume** ③ **AV Volume** ⑤ **System Shut Down**
※**Long Press**

Don't touch

System Switcher

3 Connecting Your BYOD Devices

■ Connect your BYOD device to the HDMI INPUT (AUX panel) .
If you use a laptop PC, charge the output setting.
The Cable is stored in the drawer.

AUX Panel

OUTPUT
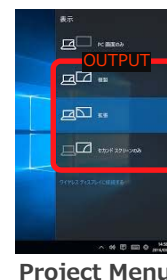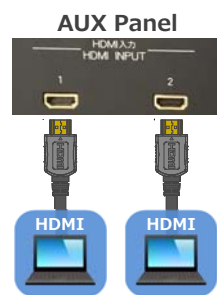
Project Menu

How To Open "Project" menu
《Windows 10》
『**Windows Key**』 + 『**P**』

🪟 + P

● **Duplicate** : Duplicate Desktop on Projector.
● **Extend** : Extend Desktop to Projector.
● **Second screen Only :** Projector Only.

■ Connect to wired microphone to the MIC INPUT. （Auxiliary）
■ Connect to music player to the AUDIO INPUT.

Wired Microphone
(Auxiliary)

AUX Panel

Music Player
(Auxiliary)
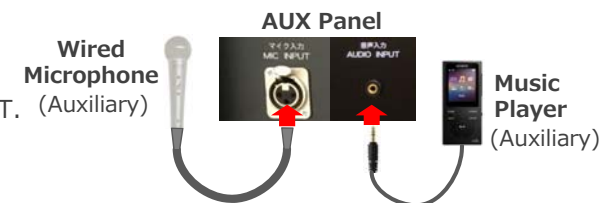
4 System OFF

Press **Shut Down button** （ ⑤ ） and **Close the Wagon's Door**.
※If you use Emergency Key, Please do not press Shut Down Button.
   Turn off Emergency Key, and Close the Wagon's Door.