Bldg.No.9　演習室053C/054C/055C　AV System User Manual

Operate the equipment in the Wagon. Follow the steps on the right.

Wagon - Top surface

- **Step 2** Wireless microphone
- **Step 1** IC card reader
- **Step 3** Volume fader

Emergency Switch
Switch the button **if IC card reader don't work**

- **Step 4-c** Blu-ray player
- **Step 4 6** Digital switcher
- **Step 2 4-b 5** External input-output panel
- **Step 4** Screen switch panel
- **Step 4-a** Wireless projection（PressIT）
- **Step 3** Power amplifier
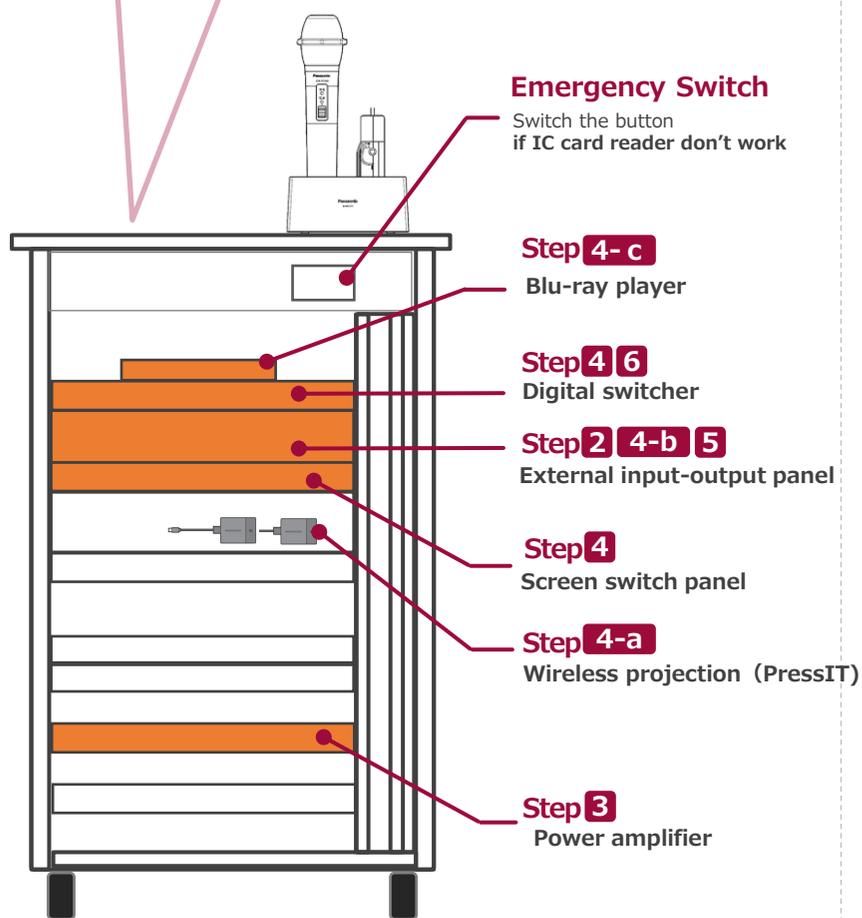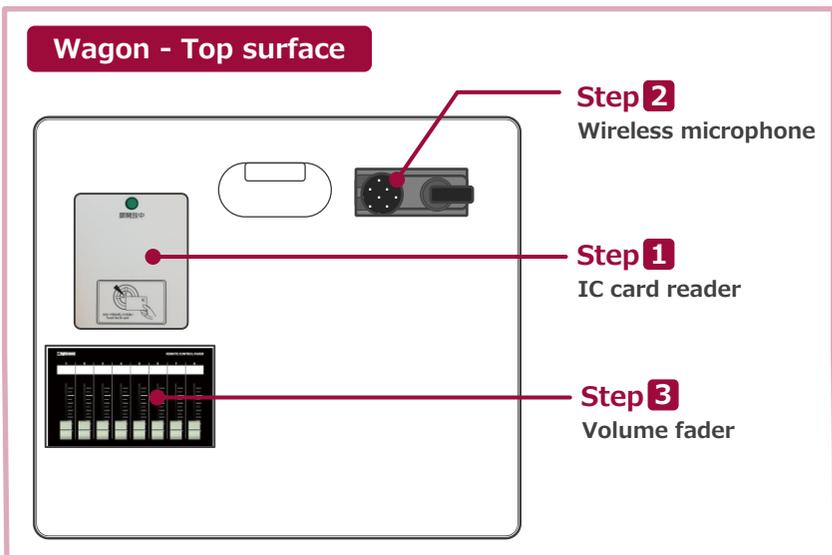
機器収納ワゴン

1 Start the system

It holds up the 'IC card' in the **IC card reader**.
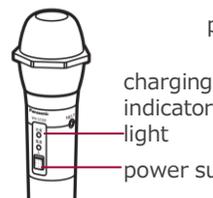
IC card reader

扉開放中

IC card

Start the system.
It can be use of the Microphone as soon as the system start.

2 Use of the Microphone "Wires" or "bring our Wired microphone".

It removes the wires microphone from the charger and turns on the power of the main unit.

Hand type
- charging indicator light
- power supply
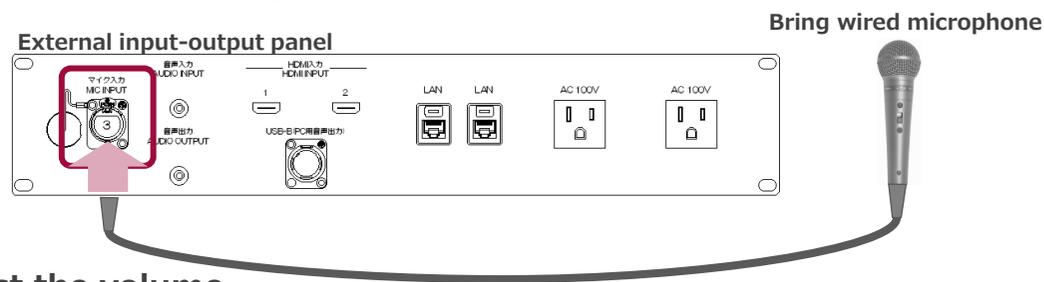
Tiepin type
- power supply
- charging indicator light

※After use it, it can please be sure to put it back into the microphone charger.

[charging indicator light of the main unit]

lighting : charging
lights out : charging complete or
　　　　　 Not properly set in the charger
flashing : error

It connects to the "**External input-output panel**" with bring wired microphone

External input-output panel

音声入力 AUDIO INPUT　マイク入力 MIC INPUT　HDMI入力 HDMI INPUT　1　2　LAN　LAN　AC 100V　AC 100V
音声出力 AUDIO OUTPUT　USB-B(PC用音声出力)
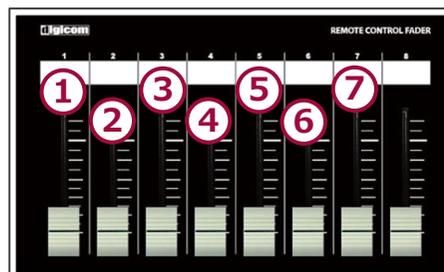
Bring wired microphone

3 Adjust the volume

The volume is pre-adjusted to the optimum level.
It operates the **volume fader** when adjustment is necessary.

After using it, it can please be sure to return to the original level (●).
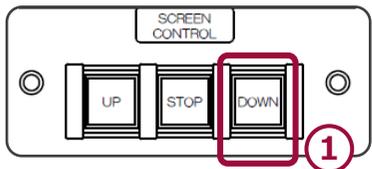
REMOTE CONTROL FADER
1 2 3 4 5 6 7

① Speaker volume (microphone)
② Speaker volume (Blu-ray/bring-in device)
③ wireless handheld microphone
④ wireless tie pin microphone
⑤ wired microphone
⑥ ceiling microphone
⑦ Audio IN

4　Screen switch panel

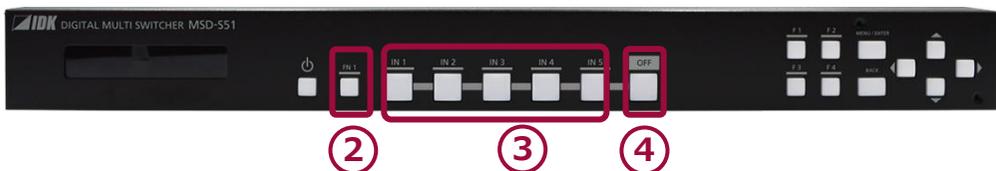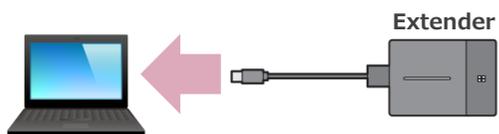It uses the screen "**switch panel**" and "**digital switcher**"

Screen switch panel

Digital switcher

① **Screen "Down"**

② **Projector Power ON or OFF**

③ **Select the Video Output to Screen**

④ **Video out "OFF"**

4-a　Wireless projection（PressIT）

It connects the **Extender** for wireless presentation with your laptop.

Extender

**Follow the under about Extender after connecting laptop.**

Solid white（wating）

Push the main button

Lit green（Displaying）

Video display is turned on

Push the main button

Solid white（wating）

Video display is turned off

Sub button while displaying press for more than 1 second

Toward the Mulch-display mode

Push the main button of the **Second Extender**

Multi screen (2 screens) video is displayed
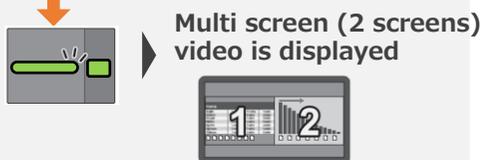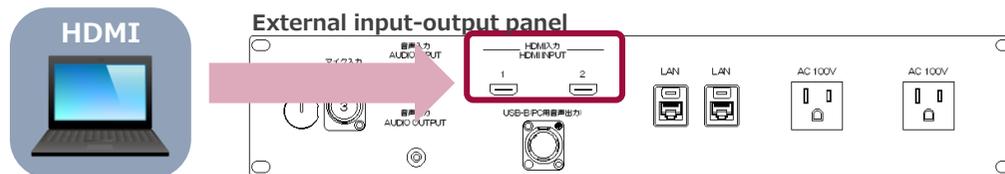
*Pressing the sub button for 1 second or longer Multi-screen mode is canceled

4-b　Connect the Bring-in devises

It connects the "**HDMI cable"** to the "**External input/output panel"** and your equipment or laptop.

HDMI

External input-output panel

《Ex）Windows 10》

It can please check the output in the settings on the display if you use the bring-in laptop.

Every time you press "**Windows key**" + "**P**" switch in orde

●**Only Laptop**：　it only displays your laptop's screen.(no screen projection)
●**Copy**：　it displays the same screen your laptop and screen.
●**Enlarge**：　Your laptop and screen can use like the dual-screen.
●**Only second screen**：　it only displays second screen.

＊It can use a "**USB-HDMI conversion adapter**" when using USB.

It connects the "**Audio cable**" -3.5Φ miniplug- to the "**External input/output panel**" and bring-in Audio devises.
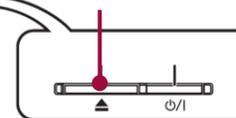
Audio devises
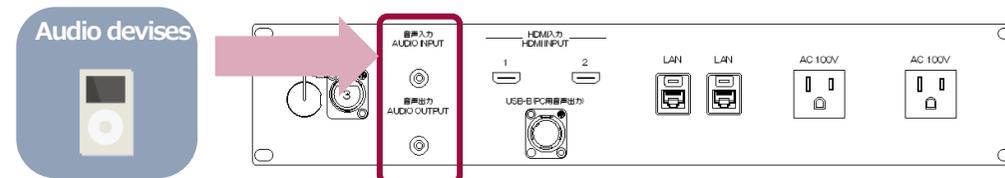
4-c　Use the "Blu-ray player"

It pushs the "**tray open**", inserts a disc and pushs on the "**close button**" with unit.
It can display the screen when you push on the playback(►) from a Remote control.

Remote control

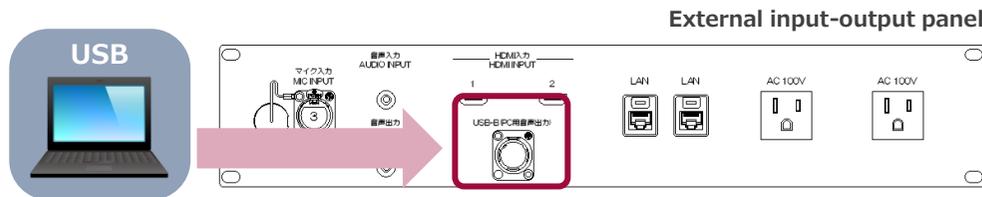**Blu-ray player**

Tray open/close button

Manual operation button

5 **Use "Microphone" on the web conference**

It can use "Microphone" on the web conference.

It connects the "**USB cable"** to the "**USB-B of the External input/output panel**"
and your Latptop of the web conference.

Set the device for the application to be used as follows.

External input-output panel

USB

Speaker

echo canceling speakerphone	⌄

Microphone

echo canceling speakerphone	⌄

6 **Shut down the system**

It puts away used equipment.
You can please operate the digital switcher and exit.

Digital switcher　　　　　　　　**①System OFF(Long press)**

Close the door of the Wagon ＊be locked

＊It could please be careful not to forget to retrieve your disc.